


Mini Modul



LK nummer 100H1001, 100H1004

Da Montagevejledning til Minimodul svagstrømstryk

Demontage

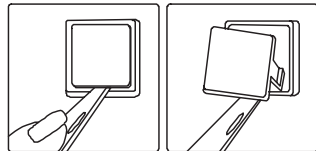

Ved kabelindføring fra siden
Den ene af de to blanketter i soklen side fjernes ved først at skære to lodrette snit og derefter at brække blanketten af.

Er kablet indført fra et hul i væggen, må hullets diameter maksimalt være 15 mm.


Til fastførelse af soklen anvendes træsskruer - max. størrelse 4. Vigtigt: Soklen må kun monteres på ikke-brændbare overflader.

Ved brug af trykplade med symbol skal det sikres, at soklen orienteres rigtigt.

Ønskes ledelys, etableres dette ved at skifte standard trykpladen ud med 'trykplade med lampe'.



Minimodulet kan også anvendes udelukkende som ledelys, idet trykfunktionen ophæves ved at klippe 4 mm af kontaktfjedrene på soklens front.

Montage

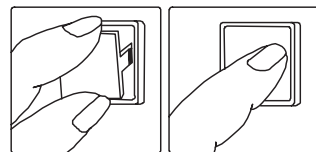

Montering

De to afisolerede ledningsender placeres i minimodulets sokkel under hver sin fjederklemme, som derefter presses ned under den tilhørende låsetap - vha. en skruetrækker.

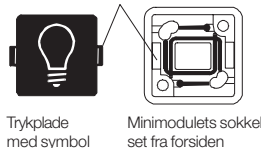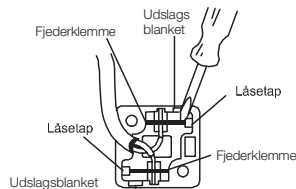

Tekniske data


Mærkespænding	3-12 V d.c. / 6-24V a.c.
Impuls	Max. 20 VA
Ledningsdimension	AWG 20-24 Ø 0,5-0,8 mm massiv
Ledelys	13 mA @ 8 V

Ved sløjfning, bemærk følgende

1. Kun to ledere må sløjfes - diameter max. 0,7 mm.
2. De to ledere skal snoes om hinanden, så de begge forbliver på plads under fjederklemmen.

En Installation instructions for Low-Voltage Mini Push-Button

Dismounting

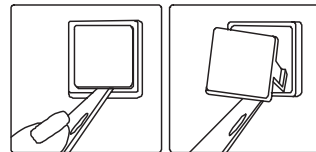


In case the power cable enters from the side of the push-button, one of its two deflection blanks is removed in the following way: Apply two vertical cuts, and then snapp off the deflection blank.

To fix the module base apply wood screws (maximum size 4). Important: The base must only be mounted on non-combustible surfaces.

If using the symbolised-plate make sure the base is guided correctly.


If desired, guiding light can be established by replacing the standard push button with 'push button with built-in lamp'.

Mounting

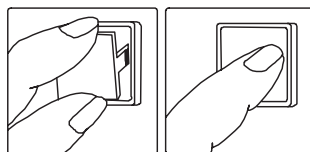


Mounting

The stripped wire ends are placed under each spring-loaded clip on the backside of the push-button's base and kept in place by securing the spring clip under the dowel (use a screwdriver as shown below).

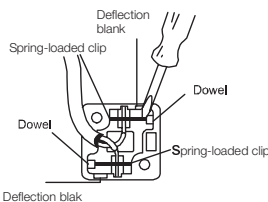

To apply the push-button solely as a guiding light (i.e. no on/off push option), cut 4 mm off the spring clips on the front of the base.

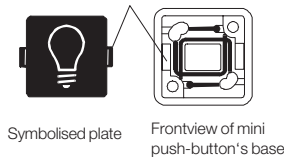

Technical data

Rated Voltage	3-12 V DC / 6-24 V AC
Impulse	Max. 20 VA
Wire diameter	AWG 20-24 Ø 0,5-0,8 mm solid
Guiding light	13 mA @ 8 V

- Re wire looping, please note
1. Allowed for two wires only, each having a diameter of max. 0,7 mm.
 2. The two wires must be twisted to ensure they both are kept in place under the spring-loaded clip.